

Verpackung ergoline Ergometer / packing of ergoline ergometers

| Gerät / device | Länge (cm) length (cm) | Breite (cm) width (cm) | Höhe (cm) height (cm) | Gewicht (kg) weight (kg) |
|---------------------------------|---------------------------|---------------------------|--------------------------|-----------------------------|
| ergoselect 1 | 107 | 60 | 144 | 69 |
| ergoselect 4 | 116 | 60 | 148 | 80 |
| ergoselect 5 | 116 | 60 | 148 | 88 |
| ergoselect 100 | 107 | 60 | 146 | 92,5 |
| ergoselect 150 | 107 | 60 | 146 | 98 |
| ergoselect 200 | 107 | 60 | 146 | 84 |
| ergoselect 400 | 209 | 80 | 157 | 87 |
| ergoselect 600 | 209 | 80 | 157 | 100 |
| ergoselect 1000 | 209 | 80 | 158 | 164 |
| ergoselect 1100 | 230 | 80 | 115 | 222 |
| ergoselect 1200 | 209 | 80 | 157 | 158 |
| ergoselect 8 | 230 | 98 | 110 | 212 |
| ergoselect 10 | 230 | 98 | 110 | 259 |
| ergoselect 12 | 230 | 98 | 110 | 295 |
| ergosprint Laufband / treadmill | 230 | 98 | 155 | 260 |
| optibike basic / optibike plus | 107 | 60 | 144 | 69 |
| ergocar basic | 68 | 70 | 100 | 67 |
| ergocar PC | 68 | 70 | 124 | 81 |