

Verpackung ergoline Ergometer / packing of ergoline ergometers

Gerät / device	Länge (cm) length (cm)	Breite (cm) width (cm)	Höhe (cm) height (cm)	Gewicht (kg) weight (kg)
ergoselect 1	107	60	144	69
ergoselect 4	116	60	148	80
ergoselect 5	116	60	148	88
ergoselect 50 / optibike 50	107	60	146	68
ergoselect 100 / optibike med	107	60	146	81
ergoselect 150	107	60	146	71
ergoselect 200	107	60	146	84
ergoselect 400	209	80	157	87
ergoselect 600	209	80	157	100
ergoselect 1000	209	80	158	164
ergoselect 1100	230	80	115	222
ergoselect 1200	209	80	157	158
ergoselect 10	230	98	110	218
ergoselect 12	230	98	110	258
ergosprint Laufband / treadmill	230	98	155	260
optibike basic / optibike plus	107	60	144	69
ergocar basic	68	70	100	67
ergocar PC	68	70	124	81