

Verpackung ergoline Ergometer / packing of ergoline ergometers

Gerät / device	Länge (cm) length (cm)	Breite (cm) width (cm)	Höhe (cm) height (cm)	Gewicht (kg) verpackt weight (kg) with packaging	Gewicht (kg) unverpackt weight (kg) without packaging
ergoselect 1	116	60	148	73	54
ergoselect 4	116	60	148	77	57
ergoselect 5	116	60	148	80	59
ergoselect 100	107	60	145	75	57
ergoselect 150	107	60	145	75	57
ergoselect 200	107	60	145	84	68
ergoselect 400	209	80	157	115	87
ergoselect 600	209	80	157	125	93
ergoselect 1200	209	80	157	190	158
ergoselect 8	230	98	110	212	159
ergoselect 10	230	98	110	259	217
ergoselect 12	230	98	110	295	255
ergosprint* / ergosprint P* Laufband / treadmill	230	110	98	275 – 300*	211
optibike basic / optibike plus	116	60	148	73	54
ergocar basic	68	70	100	67	45
ergocar PC	68	70	124	81	51
motion body 600 med	120	80	180	131 – 167*	108
motion cross 600 med	212	77	190	123 – 161*	103

* (je nach Verpackungsart und Transportweg) / *(depending on packaging and transportation)